

4. Install solenoids.

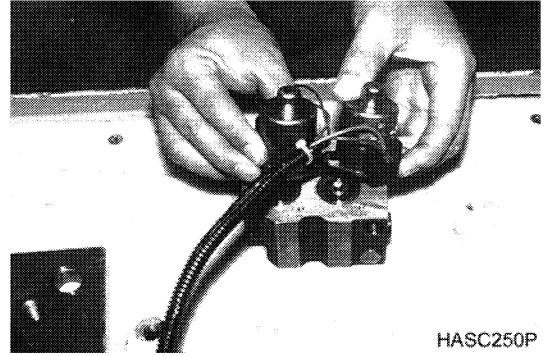


Figure 124

HASC250P

5. Install socket head bolts to secure solenoid in place.(M4 x 10, 4 each)

**NOTE:** *Tightening Torque 3 - 4 Nm (0.35 - 0.45 kg•m)  
(2.53 - 3.25 ft lb).*

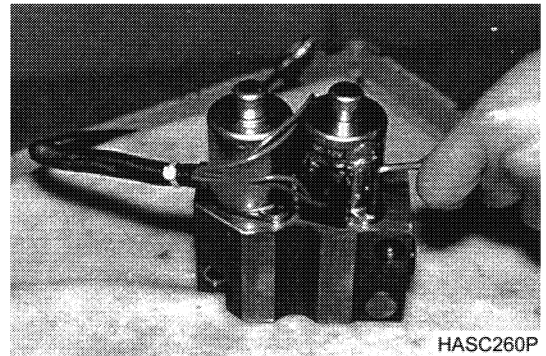


Figure 125

HASC260P

6. Install O-ring.

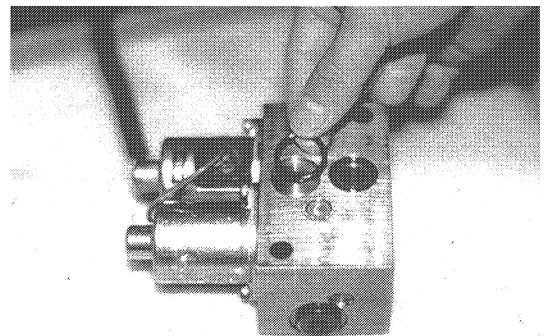


Figure 126

HASC270P

7. Mount solenoid assembly onto main pump using socket head bolts. (M4 x 10, 4 each)

**NOTE:** *Tightening Torque 28 - 35 Nm (2.9 - 3.6 kg•m)  
(21 - 26 ft lb)*

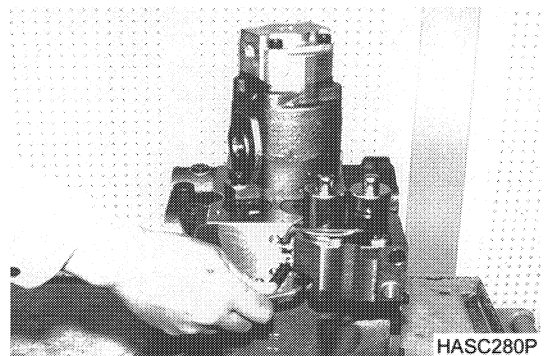


Figure 127

HASC280P

# Remote Control Valve (Work Lever / Joystick)

Edition 1

---

**MEMO**

---

# Table of Contents

## Remote Control Valve (Work Lever / Joystick)

Safety Precautions.....	5
Applicable Models .....	5
Structure Diagram .....	6
Parts List.....	7
Performance Specification .....	8
Hydraulic Pressure Circuit Diagram.....	8
Disassembly and Assembly Tool .....	9
Disassembly Method .....	9
Assembly Method.....	12

---

**MEMO**

---